



BLUE	RED	MAGENTA	GREEN	CYAN	YELLOW	WHITE			
1 ! DEF FN	2 @ FN	3 # LINE	4 \$ OPEN#	5 % CLOSE#	6 & MOVE	7 ' ERASE	8 (POINT	9) CAT	
BLACK 0 _ FORMAT	SIN Q <= PLOT ASN	COS W <> DRAW ACS	TAN E >= REM ATN	INT R < RUN VERIFY	RND T > RAND MERGE	STRS Y AND RETURN	CHRS U OR IF	CODE I AT INPUT IN	
PEEK O ; POKE OUT	TAB P " PRINT	READ A STOP NEW	RESTORE S NOT SAVE	DATA D STEP DIM	SGN F TO FOR	ABS G THEN GOTO	SQR H ↑ GOSUB CIRCLE	VAL J _ LOAD VALS	
LEN K + LIST SCREENS	USR L = LET ATTR	LN Z : COPY BEEP	EXP X £ CLEAR INK	LPRINT C ? CONT PAPER	LLIST V / CLS FLASH	BIN B * BORDER BRIGHT	INKEYS N ' NEXT OVER	PI M . PAUSE INVERSE	
CAPS SHIFT		CAPS SHIFT		SYMBOL SHIFT		SYMBOL SHIFT		↵	

BREAK		EDIT	TRUE VIDEO	INV. VIDEO	F5 (NMI)	GRAPH	EXTRA	
CAPS LOCK	DELETE ←		←	↓	→	↑		
FIRE		FIRE	←	↓	→	↑	SWITCH VIDEO	+
:	\$	=	;	"	()	,	.
/	/	*	-	.	↵			

ZX-UNO STICKERS 4 KEYBOARD PRODUCTION-AV LAYOUT

		0							
		ZX UNO		ZX UNO		☰		🌈	
1	2	3	4	5	6	7	8	9	
BREAK		EDIT	TRUE VIDEO	INV. VIDEO	F5 (NMI)	GRAPH	EXTRA		
CAPS LOCK		DELETE ←		←	↓	→	↑		

NMI: SYM + FIRE + F5		RESET: SYM + FIRE + ←		MASTER RESET: SYM + FIRE + DELETE		🔊	🔊 -	🔊 +	🔄
ZX-UNO		EAR	SD Card Power	Tarjeta SD Alimentación	JTAG	VGA	RGB		
		Video	MIC						
		SD Card	Auriculares						
		Expansion	Tarjeta SD						
		Expansión	Keyboard						
		Alimentación	Power						
Palanca de Juego		Vídeo	Micrófono	Teclado	Joystick				

BLUE 1 ! DEF FN	RED 2 @ FN	MAGENTA 3 # LINE	GREEN 4 \$ OPEN#	CYAN 5 % CLOSE#	YELLOW 6 & MOVE	WHITE 7 ' ERASE	8 (POINT	9) CAT
BLACK 0 - FORMAT	SIN Q <= PLOT ASN	COS W <> DRAW ACS	TAN E >= REM ATN	INT R < RUN VERIFY	RND T > RAND MERGE	STRS Y AND RETURN {	CHRS U OR IF }	CODE I AT INPUT IN
PEEK O ; POKE OUT	TAB P " PRINT @	READ A STOP NEW ~	RESTORE S NOT SAVE 	DATA D STEP DIM \	SGN F TO FOR {	ABS G THEN GOTO '	SQR H ↑ GOSUB CIRCLE	VAL J - LOAD VALS
LEN K + LIST SCREENS	USR L = LET ATTR	LN Z : COPY BEEP	EXP X £ CLEAR INK	LPRINT C ? CONT PAPER	LLIST V / CLS FLASH	BIN B * BORDER BRIGHT	INKEYS N ' NEXT OVER	PI M . PAUSE INVERSE
CAPS SHIFT		CAPS SHIFT		SYMBOL SHIFT		SYMBOL SHIFT		↵

BREAK		EDIT	TRUE VIDEO	INV. VIDEO	F5 (NMI)	GRAPH	EXTRA
CAPS LOCK	DELETE ←		←	↓	→	↑	+
FIRE	FIRE	←	↓	→	↑	SWITCH VIDEO	
:	\$	=	;	"	()	,
/	/	*	-	.	↵		

0								
ZX			ZX			☰		
1 2 3 4 5 6 7 8 9								
BREAK		EDIT	TRUE VIDEO	INV. VIDEO	F5 (NMI)	GRAPH	EXTRA	
CAPS LOCK	DELETE ←		←	↓	→	↑		

NMI: SYM + FIRE + F5
RESET: SYM + FIRE + ←
MASTER RESET: SYM + FIRE + DELETE

✗ EAR SD Card Power Tarjeta SD Alimentación JTAG
 Video MIC VGA }
 SD Card Auriculares
 Expansion Tarjeta SD
 Expansión Keyboard
 Alimentación Power
 Palanca de Juego Vídeo Micrófono Teclado Joystick

ZX-UNO STICKERS 4 KEYBOARD PRODUCTION-AV LAYOUT

BLUE 1 ! DEF FN	RED 2 @ FN	MAGENTA 3 # LINE	GREEN 4 \$ OPEN#	CYAN 5 % CLOSE#	YELLOW 6 & MOVE	WHITE 7 ' ERASE	8 POINT	9) CAT
BLACK 0 - FORMAT	SIN Q <= PLOT ASN	COS W <> DRAW ACS	TAN E >= REM ATN	INT R < RUN VERIFY	RND T > RAND MERGE	STR\$ Y AND RETURN {	CHRS U OR IF }	CODE I AT INPUT IN
PEEK O ; POKE OUT	TAB P " PRINT @	READ A STOP NEW -	RESTORE S NOT SAVE 	DATA D STEP DIM	SGN F TO FOR 	ABS G THEN GOTO 	SQR H ↑ GOSUB CIRCLE	VAL J - LOAD VAL\$
LEN K + LIST SCREEN\$	USR L = LET ATTR	LN Z : COPY BEEP	EXP X £ CLEAR INK	LPRINT C ? CONT PAPER	LLIST V / CLS FLASH	BIN B * BORDER BRIGHT	INKEY\$ N ' NEXT OVER	PI M . PAUSE INVERSE
CAPS SHIFT		CAPS SHIFT		SYMBOL SHIFT		SYMBOL SHIFT		↵

BREAK	EDIT	TRUE VIDEO	INV. VIDEO	F5 (NMI)	GRAPH	EXTRA		
CAPS LOCK	DELETE ←	←	↓	→	↑	+		
FIRE	FIRE	←	↓	→	↑		SWITCH VIDEO	
:	\$	=	;	"	()	,	.
/	/	*	-	.	↵			

		0	[Rainbow Bar]					
		ZX S	ZX S					[Rainbow Bar]
1	2	3	4	5	6	7	8	9
BREAK	EDIT	TRUE VIDEO	INV. VIDEO	F5 (NMI)	GRAPH	EXTRA		
CAPS LOCK	DELETE ←	←	↓	→	↑			

NMI: SYM + FIRE + F5	✗	🔊-	🔊+	🔄
RESET: SYM + FIRE + ←	EAR	SD Card Power	Tarjeta SD Alimentación	JTAG VGA RGB
MASTER RESET: SYM + FIRE + DELETE	Video	MIC		
ZX-UNO				
[Rainbow Bar]				
ZX-S				
[Rainbow Bar]				
Palanca de Juego	Vídeo	Micrófono	Teclado	Joystick
[Rainbow Bar]				
[Rainbow Bar]				

ZX-UNO STICKERS 4 KEYBOARD PRODUCTION-AV LAYOUT

BLUE 1 ! DEF FN	RED 2 @ FN	MAGENTA 3 # LINE	GREEN 4 \$ OPEN#	CYAN 5 % CLOSE#	YELLOW 6 & MOVE	WHITE 7 ' ERASE	8 (POINT	9) CAT
BLACK 0 - FORMAT	SIN Q <= PLOT ASN	COS W <> DRAW ACS	TAN E >= REM ATN	INT R < RUN VERIFY	RND T > RAND MERGE	STRS Y AND RETURN {	CHRS U OR IF }	CODE I AT INPUT IN
PEEK O ; POKE OUT	TAB P " PRINT @	READ A STOP NEW ~	RESTORE S NOT SAVE 	DATA D STEP DIM	SGN F TO FOR {	ABS G THEN GOTO }	SQR H ↑ GOSUB CIRCLE	VAL J - LOAD VAL\$
LEN K + LIST SCREEN\$	USR L = LET ATTR	LN Z : COPY BEEP	EXP X £ CLEAR INK	LPRINT C ? CONT PAPER	LLIST V / CLS FLASH	BIN B * BORDER BRIGHT	INKEY\$ N ' NEXT OVER	PI M . PAUSE INVERSE
CAPS SHIFT		CAPS SHIFT		SYMBOL SHIFT		SYMBOL SHIFT		↵

BREAK	EDIT	TRUE VIDEO	INV. VIDEO	F5 (NMI)	GRAPH	EXTRA		
CAPS LOCK	DELETE ←	←	↓	→	↑	+		
FIRE	FIRE	←	↓	→	↑		SWITCH VIDEO	
:	\$	=	;	"	()	,	.
/	/	*	-	.	↵			

		0	[Rainbow Bar]					
			ZX S	ZX S	[Icon]	[Rainbow Bar]		
1	2	3	4	5	6	7	8	9
BREAK	EDIT	TRUE VIDEO	INV. VIDEO	F5 (NMI)	GRAPH	EXTRA		
CAPS LOCK	DELETE ←	←	↓	→	↑			

NMI: SYM + FIRE + F5	[Mute]	[Volume -]	[Volume +]	[Refresh]
RESET: SYM + FIRE + ←	EAR	SD Card Power	Tarjeta SD Alimentación	JTAG VGA RGB
MASTER RESET: SYM + FIRE + DELETE	Video	MIC		
ZX-UNO				
[Rainbow Bar]				
en-xz				
[Rainbow Bar]				
SD Card	Auriculares	Expansion	Tarjeta SD	Expansion
Alimentación	Power	Palanca de Juego	Vídeo	Micrófono
Teclado	Joystick			